ATD-80113 Instructions

1. Operating Instructions

- Take your ATD Saber Light® out of it's box.
- Plug the AC adapter into any 110-volt AC power source.
- Turn unit on and off with the red pushbutton switch in the end of the unit.
- Avoid bumping or dropping your ATD Saber Light®.

2. Operating Environment

- Keep your ATD Saber Light® away from water.
- Keep your ATD Saber Light® away from heat sources.
- Keep your ATD Saber Light® away from acids and alkalines.
- Avoid bumping or dropping your ATD Saber Light®.

3. LED board replacement instructions

- Because of the high voltage and special techniques needed to repair the ATD Saber Light®, we recommend having a qualified technician perform the repairs for you. Should you decide to repair this unit yourself, please read the following tips.
- When repairing your ATD Saber Light®, do not allow any metal to come in contact with the the switch or the PC board and its components.
- Turn the ATD Saber Light® off, and disconnect from the power source.
- Do not attempt repairs while the unit is still connected to the power source.
- Repair unit in a clean and dry environment.
- Use care when operating soldering irons, as they are hot.

4. This unit is **NOT** waterproof, and is **NOT** intended to be used in showers, saunas, or any other potentially wet locations. Keep the ATD Saber Light® away from sinks, tubs, showers, etc. Retrieving **ANY** electrical appliance when they fall into the water can be fatal.

5. The ATD Saber Light® is to be used for general indoor lighting. It is **NOT** intended to be used in potentially hazardous locations such as near flammables or in explosive atmospheres.

ATD Saber Light® is a registered trademark of ATD Tools, Inc. Patent Pending

ADVANCED TOOL DESIGN

ATD-80113

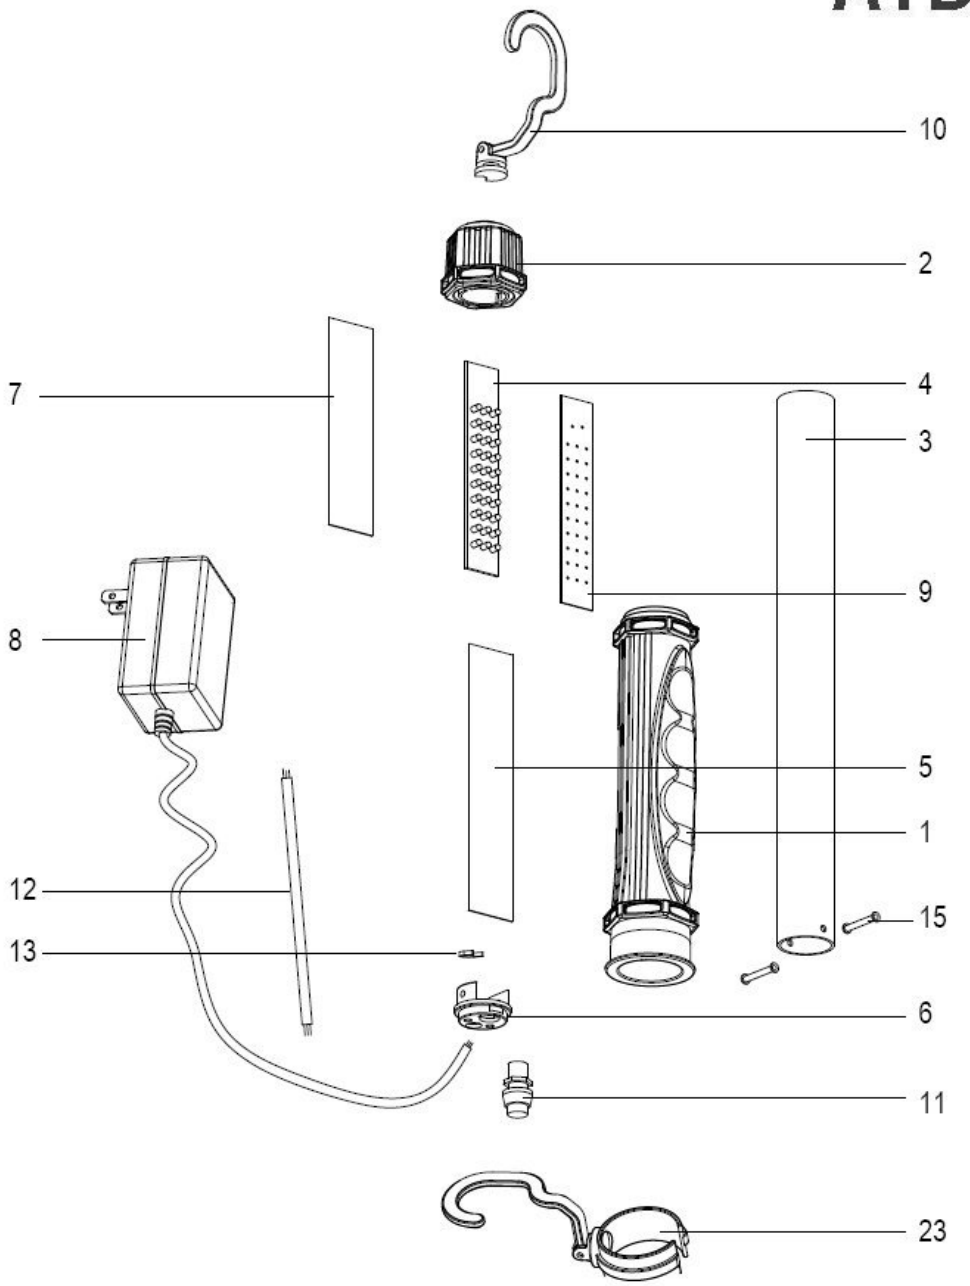

ORDERING PART#	ITEM#	PART DESCRIPTION
PRT80103-01	1	HANDLE GRIP
PRT80103-02	2	TOP CAP
PRT80100-03	3	CLEAR TUBE
PRT80113-04	4	LED PCB
PRT80100-18	5	INSULATION BOARD
PRT80113-06	6	BASE
PRT80100-05	7	LABEL
PRT80113-08	8	CABLE, 18/2 SJTOW 25'

ORDERING PART#	ITEM#	PART DESCRIPTION
PRT80100-21	9	REFLECTIVE PAPER
PRT80103-10	10	HOOK
PRT80100-11	11	KNOB SWITCH
PRT80113-12	12	CONNECTION WIRE
PRT80113-13	13	CLIP CIRCLE
PRT80100-15	15	RIVET, 3.2x9
PRT80103-23	23	CLIP ON SWIVEL HOOK